

# Cordless Scanner Quick Guide

## Notice

- A standard kit contains: a handheld unit, a cradle, a cable, and a quick guide.
- It is suggested to read the user manual in details before use.

## Parts of the handheld unit



- ① Scan window
- ② Trigger (Press to trigger / Long press 3 seconds to turn on)
- ③ Beeper
- ④ On Base indicator (Blue LED)
- ⑤ Successful decoding indicator (Green LED) / Communication fail indicator (Red LED) / Charging (Red/Green LED)

## Parts of the cradle



- ⑥ Power indicator (Blue LED)
- ⑦ Communication indicator (Green LED)
- ⑧ Key (Long press 10 seconds to restore factory default setting of cradle)


## Installation of cradle

1. Refer to the below pictures, connect the host with the scanner with different cables firstly, and then connect the adaptor to the power socket.
2. Ensure that all connections are secure. After a few seconds, if only the blue LED on the cradle is ON, it indicates the cradle is in normal working mode.


Note: If you use the PS/2 keyboard cable, you must restart the device after the connection is successful.



USB cable

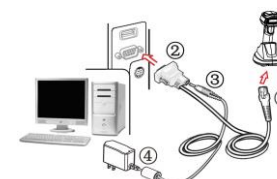


RS232 cable

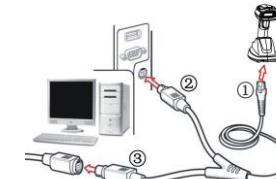

PS/2 keyboard cable

## Charge battery

- Please charge the battery before the first time of use. The Red LED on the handheld unit is turned on when the charging is in process. When the charging process completes, the Red LED is turned off, and the Green LED is turned on.
- Charging time: 6 hours for fully charged.
- You can charge the battery via a USB port on the device or an optional 5 VDC adapter.

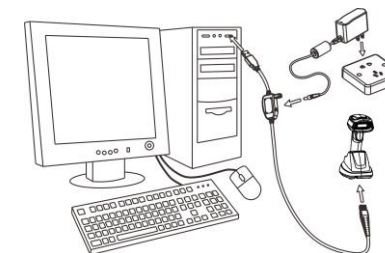

Note: The 5V power adapter is an optional accessory

## Indication of handheld unit for wireless data transmission

Successful	Beeper	Red LED	Vibration
Yes	Off	Off	Off
No	Two long beeps	Blinks 2 times, and then turns off	Short vibrates 2 times, and then turns off

## Turn off/on handheld unit

1. If you want to turn off the handheld unit, scan the barcode as shown right.



2. If you want to turn off the handheld unit via trigger key, please press and hold the trigger key, after the laser beam turns off, wait for another 5 seconds, the handheld unit will be turned off, then you can release the trigger key at this moment.

3. If you want to turn on the handheld unit again, please keep the trigger key being pressing for 3 seconds.

## Quick setting to wireless network

1. Make sure that both the handheld unit and the cradle are in normal working mode. Normally it means that only the blue LED on the cradle are ON.

2. Use the handheld unit to scan the right setting barcode. At the same time, the handheld terminal will make beep-beep-beep sound. The blue LED on the handheld unit will blink and the beeper will beep regularly to indicate that the handheld unit is ready to be positioned onto the cradle.



3. Firmly position the handheld unit onto the cradle within 15 seconds. A long beep and a short beep will be emitted to indicate a successful setting. Otherwise, three long beeps will be emitted to indicate a failed setting, and the red LED on the handheld will blink 3 times.

4. If you want to disconnect, you can scan the barcode as shown below.



## Bluetooth mode

HID mode



SPP mode



Cradle mode\*



BLE mode



## Scan mode

Good-read off



Momentary\*



Auto-detection- Good-read off



## Initialization settings and information display

Some parameters of handheld unit return to default setting



Return to default setting of cradle



Cradle firmware version display



Bluetooth MAC address display



All parameters of handheld unit return to default setting



Handheld unit firmware version display



Handheld unit Bluetooth version display



Bluetooth name display



## Vibration indication

Disable



Enable\*



## Beeper indication

Disable



Enable\*



## Volume of beeper

Low



Middle



High\*



*Note: The factory default settings are indicated with asterisks (\*).*